Hotwire Configuration Guide

SIP Config from Hotwire:

Name: Anything User Type: Friend DTMF Mode: Auto

Host: Provided by Hotwire

Port: Default Register: Custom -

register => <phonenumber>@<PBXIP>:<username>:<password>:5060/<phonenumber>

Auth: Yes

Auth User: Default From User: Default

From Domain: Yes - Provided by Hotwire

Realm: Default

Outbound Proxy: Enabled - Host IP Username: Provided by them Secret: Provided by them

Outbound Caller ID Number: Must be set to a valid number on this trunk

Qualify: 5000 Can Reinvite: No Insecure: Port + Invite

Configuration GUI follows:



SMARTER BUSINESS COMMUNICATIONS support@ipitomy.com

SIP Provider		
Name:	Testdemo45	
User Type:	friend 💌	
DTMF Mode:	rfc2833 💌	
RFC2833 Compensate:	No 💌	
Host:	72.13.158.14	
Port:	Default Custom	
Register:	O Yes O No O Custom	
	register=>9542510117@72.64.129.45:T3std3m045:Testdemo45@7 2.13.158.14:5060/9542510117 register=>9542510116@72.64.129.45:T3std3m045:Testdemo45@7 2.13.158.14:5060/9542510116	
Authentication:		auth = Testdemo45 T3std.
Auth User:	O Default Custom	9542510116
From User:	O Default Custom	9542510116
From Domain:	O Default Custom	72.64.129.45
Realm:	O Default Custom	72.64.129.45
Outbound Proxy:	Disabled O Enabled	
Username:	Testdemo45	
Secret:	T3std3m045	
Inbound Caller ID:		
Outbound Caller ID Name:		
Outbound Caller ID Number:	9542510116	
Call Limit:	2	